Letters in parentheses are optional. Either upper or lower case letters may be used.

HELP COMMANDS

H(ELP)		provides information about commands
L(IST)		command list with brief descriptions
PRINT	[path]filename	prints all online help to filename

OPERATOR COMMANDS

assign ethernet	in/out num label	assign IFS input or output label get ethernet & IP addresses
flags		temperature & power supply status
in	in_name out out_name	set input selection for an IFS output
rip_addr	address, rarp, or bootp	set IP address
out	out_name in in_name	set input selection for an IFS output
password	password	set ftp password
selftest	num, label, or ALL	test control of coax switches
sernum		read IFS board serial number
username	username	set ftp user name
version		software version of current executable

LOW LEVEL HARDWARE COMMUNICATION

	DIVICATION
iord8 port	read byte from ISA bus address port
iowrt8 port data	write hex byte to ISA bus address port
loadxil	load Xilinx file from disk
load_sw	pulse selected coax switch driver
xt out_num (skip_num)	increment input selection
rd_sw num letter	read coax switch sense lines
set_all in_num	set all outputs to same input
set_output out_num in_num	set input selection for an IFS output
step in_num group (delay)	sequentially switch IFS outputs
wrt_sw num letter data	write to coax switch registers

IFS MONITOR & CONTROL

cpuload		reports CPU load
ifs_testreg	data	write data to IFS test register
meminfo		get available memory info
reboot		reboot microprocessor
test_ifsx		test IFS board XILINX

DISK UTILITIES

change drive
calculate checksum of a file
copy file
delete file
list files in present directory
get info about available disks
select executable for next restart
extract .exe file from .cxe file
read binary file
read file - binary & ascii
rename file
set system files to read only
type ascii file contents